


MAINTENANCE: PNEUMATIC CYLINDER

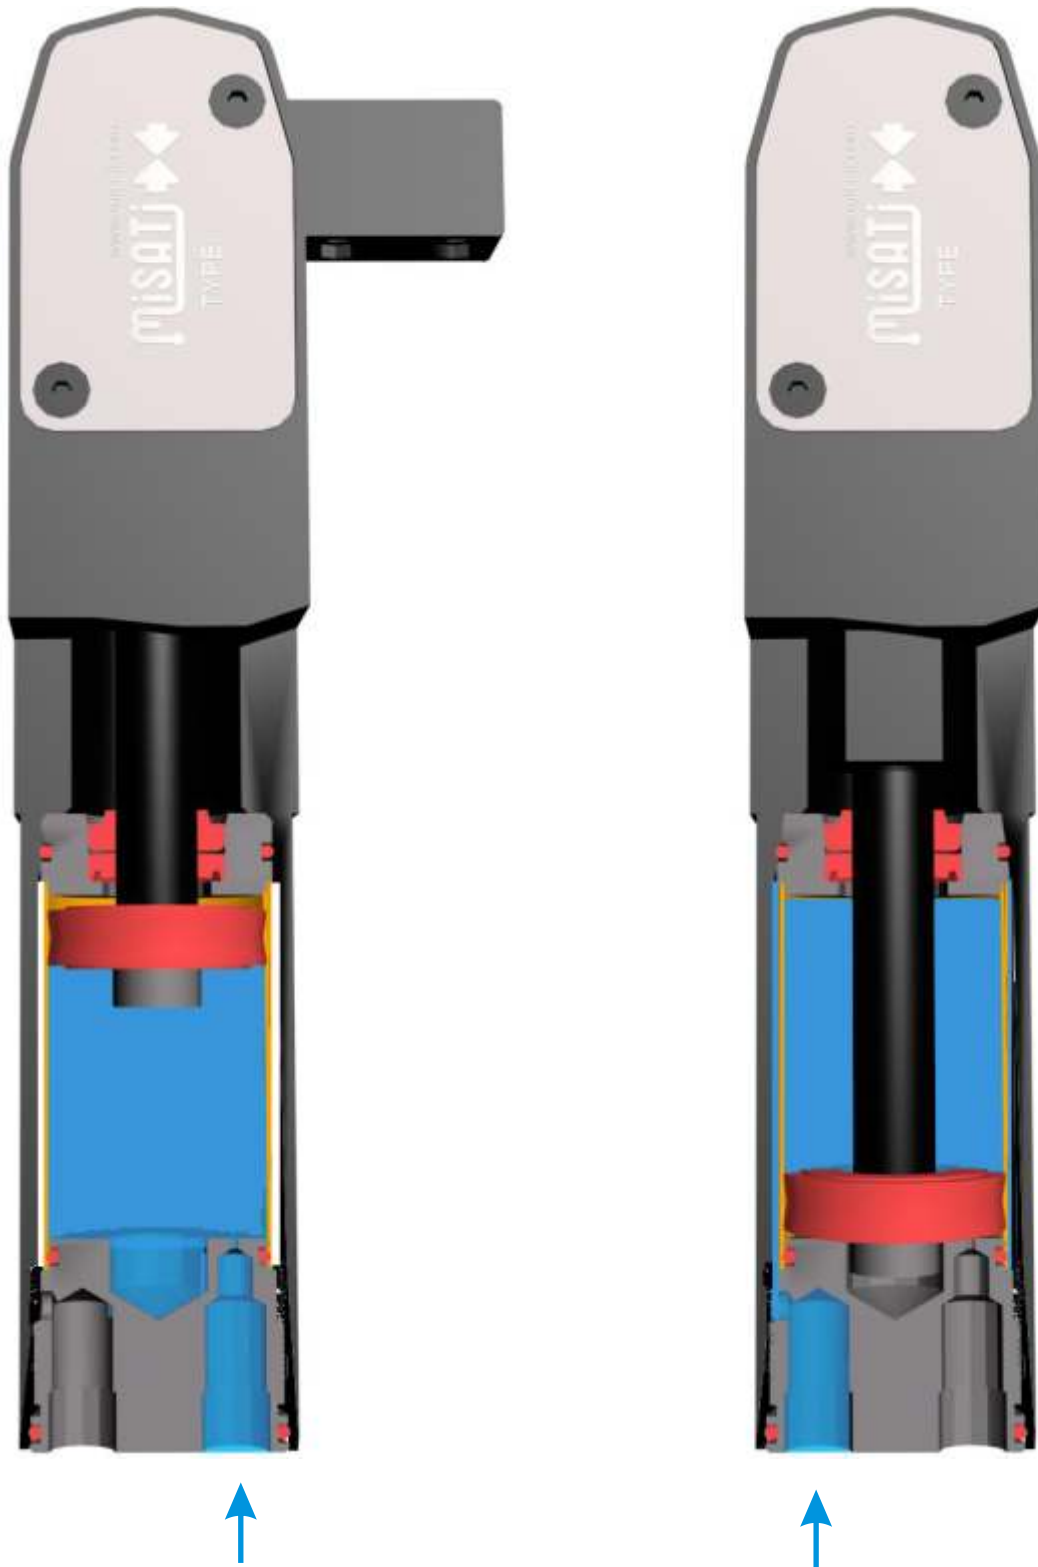

Air must be filtered, dry and regular. Non-lubricated air can be used.